



## M-1300 46" Round Table Set Assembly Instructions

**NOTE:** Please check contents and read directions carefully before assembly. If any items are missing or damaged, *do not take the product back to the store. Call Moon Valley customer service at 866.332.1616 and we will correct the problem as promptly and as efficiently as possible.* Also, checking or cracking of the logs is a *natural* part of the drying aspect of cedar. *This does not affect the structural integrity of the wood.* This natural occurrence enhances the rustic beauty of the product.

### 46" Round Table Set Components



#### (1) Table

- (4) Table Legs
- (4) 11" Leg Braces
- (4) 9" Leg Braces
- (1) Pre-Assembled Table Top
- (16) 2 1/2" Lag Bolts
- (4) 2 1/2" Screws
- (4) Leveling Glides



#### (4) Benches

- (4) Pre-Assembled Bench Tops
- (16) Bench Legs
- (8) 8 1/2" Leg Braces
- (8) 18" Seat Braces
- (8) 2 1/2" Lag Bolts
- (8) 3 3/8" Lag Bolts
- (16) 2" Screws
- (16) 2 1/2" Screws

**Tools Required:** Rubber Mallet or Hammer, Electric Drill or Screwdriver w/ Square-Head Bit, 1/2" Socket & Socket Wrench

### Table



1. Insert table legs into pre-drilled holes in table top underlay. Use rubber mallet to tap any doweled ends into place. If using a hammer, be sure to pad impact area to avoid damaging the product.



2. Use 2 ½” lag bolts to secure 11” leg braces to the table legs, as well as to bottom of table (as shown in these two photos).



3. Use 2 ½” lag bolts to secure the 9” leg braces to the table legs and to the table underlay (as shown in these two photos).



4. Use 2 ½” screws to secure the doveled end of the table legs to the table underlay.



5. Use rubber mallet or hammer to tap leveling glides into bottom of each table leg.

## Benches



6. Insert 8 ½” leg braces into pre-drilled holes on bench legs to join legs and create leg assembly. Use mallet to tap them into place. *Note: Newer table models will utilize 8 ½” braces which recess into holes on table legs.*



7. Tap all bench leg assemblies into the pre-drilled holes on the bottom of the bench.



8. Install 18” seat brace (as shown in next two photos). Center the angled brace ends in middle of the bench. Place the other end of the brace underneath the 8 ½” leg brace. Insert the 2 ½” lag bolts to secure the seat braces to the seat bottom.

Next, run the ¼” drill bit through the 8 ½” leg brace and into the seat brace.




9. Use 3 3/8” lag bolt to secure the seat brace to the leg brace, as shown in this photo series.





10. Use 2 ½” screws to secure the doweled end of each bench leg to the seat underlay.

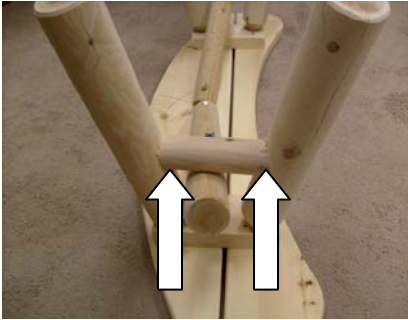

11. Use 2” screws to secure the 8 ½” leg braces to the bench legs, as identified by arrows in photo.



Thank you for your Moon Valley purchase and we hope that you enjoy your 46” Round Table Set. To view other Moon Valley products, please visit us at [www.moonvalleyrustic.com](http://www.moonvalleyrustic.com).

Moon Valley Rustic Furniture P.O. Box 929, Clarkston, MI 48347 Phone: 866.332.1616 Fax: 248.625.1870  
[www.moonvalleyrustic.com](http://www.moonvalleyrustic.com)